



## Fairy Floss Machine Instructions

### YOU WILL NEED:


- Premixed Sugar / Colours (approx 4 – 5 kg plain white sugar per sachet)
- Jar of water to hold the sticks
- A small jug or scoop
- A 10 amp power outlet (this unit will draw the full 10 amps and CAN NOT be plugged into a power board or double adapter with other items)
- A moist rag to wipe your hands

### SETTING UP THE MACHINE:

1. Keep the fairy floss machine unplugged whilst setting up the machine and preparing the mixture.
2. Unscrew the two travel bolts on either side of the spinner cap all the way and check that the head is loose for operation.
3. Place the bowl and then the plastic bubble guard onto the machine.
4. Place the mesh inside the bowl and secure in place with all 4 clips.
5. Prior to plugging in the machine ensure both the Motor & Master and the Heat switches are turned off (facing downwards).
6. Plug in the machine.

### OPERATING THE MACHINE

1. Use a scoop to pour the sugar mixture into the hole of the spinner (no more than up to level with the top of the leather floaters).
2. Turn the Heat Controller knob to half way.
3. Turn on the Motor & Master switch and the machine will start spinning.
4. Turn on the Heat switch and the machine will start to make floss after the machine warms up (about two minutes).

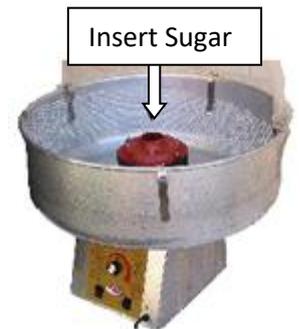

### HOW TO MAKE FAIRY FLOSS

1. Hold the end of the stick between your finger and thumb. Roll the stick in the web of floss building up around the bowl.



**WARNING: Keep your hand clear of the leather floaters on the spinner as this is rotating at 3200rpm.**

2. To momentarily stop the flow of floss, turn off the Heat switch
3. When you have used all the sugar in the spinner cap, switch off the Heat switch and the Motor & Master switch. Refill the spinner cap with the next scoop of sugar mixture.
4. To change colours, run the first colour out, then add the new colour (do not attempt to remove sugar from the spinner).



### CLEANING THE FAIRY FLOSS MACHINE

1. Leave the remaining sugar inside the spinner and DO NOT CLEAN. There are fragile wires and an element inside which are easily damaged.
2. Remove the bowl, mesh and clips and wash with soapy water (no abrasives). Roll the mesh up and use the 4th clip to secure it. This will prevent losing the loose clip.
3. The bolts on either side of the spinner cap MUST be tightened again before transporting.

**If you do have any queries please call 9377 3325 seven days a week.**